

Fiskars® 3 in 1 Corner Punch


- 3 patterns in a single hole punch
- Ideal for decorating cards and scrapbook pages
- Maximum thickness to punch :
eg 135gr, recommended 110gr

1. Features



3 patterns in a single hole punch

You can collect and re-use the cut out patterns to decorate your creations.

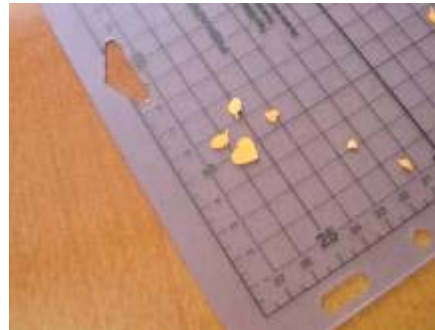

2. How to use the 3 in 1 corner punch

The easiest and most precise way to perforate a corner is to rotate the hole punch carefully positioning the paper in the correct place.



Turn the hole punch upside down, put the piece of paper in the selected slot and check that the paper is perfectly positioned between the two metal points in the hole punch. Then press the hole punch down firmly with the palm of your hand.



3. Tips

After each use of the hole punch, tap the perforated sheet so that all the paper waste completely comes out of the hole punch. Repeat this action several times if paper remains stuck in the hole punch.



To sharpen the blades of your 3 in 1 corner hole punch, perforate sand paper several times (used for DIY). Take special care to use the finest sandpaper so that you don't damage your Fiskars® tool.

To oil the blades of your corner hole punch for photos, perforate several times on sulphurated paper (used in cooking) or on waxed paper. This allows you to « oil » your cutting tool while lengthening its lifespan giving a better cut and making it easier to use.
