 
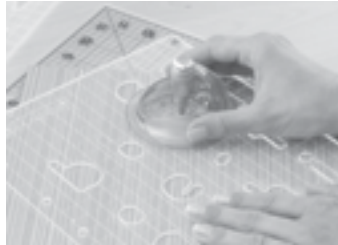 


Instructions: Ultra ShapeXpress

FISKARS®

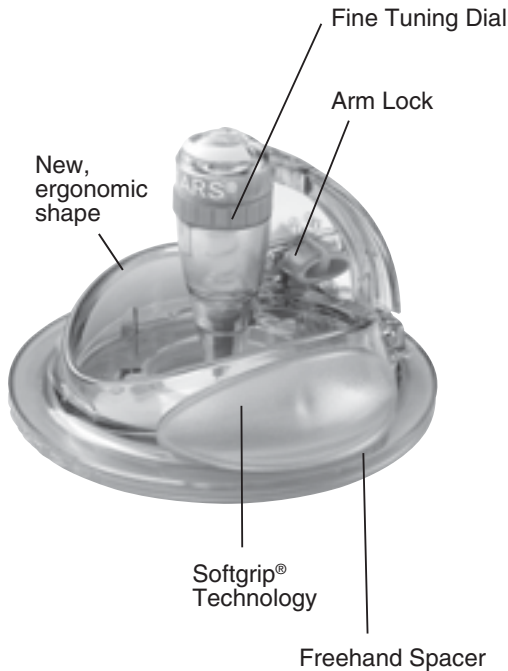


Use with ShapeTemplates:

1. Remove the orange freehand spacer.
2. Place the ShapeTemplate on top of your paper (on a cutting mat) with the template logo facing up, use your other hand to hold the template in place.
3. Place the Ultra ShapeXpress™ inside the shape and slowly slide around the edge holding the blade carriage tight to the edge tracing the desired shape. Apply consistent pressure to ensure a clean cut.



Use Freehand:

1. Replace the freehand spacer.
2. Place the Ultra ShapeXpress™ on top of your paper (on a cutting mat) and slide the tool across the paper to create your desired shape.

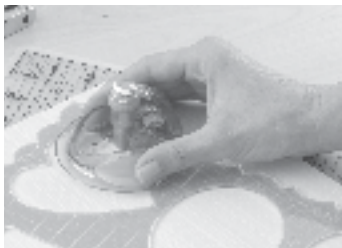

How to Hold:

Comfortably grasp the Ultra ShapeXpress™ with thumb and forefinger on easy-grip pads with the blade arm closest to your hand. DO NOT hold the tool from the knob at the top of the cutter. Move your whole arm making the Ultra ShapeXpress™ an extension of your hand.



Remove / Replace Freehand Spacer:

1. To remove, grasp the orange freehand spacer and twist clockwise to unlock.
2. To replace, align the freehand spacer on the bottom of the Ultra ShapeXpress™ and twist counter-clockwise to lock into position.



Insert / Replace Blade:

1. Slide lock into the unlock position and pivot arm back to reveal blade barrel.
2. Drop new blade into barrel.
3. Pivot arm back into place and slide lock into lock position. Blade depth is set for standard 65 lb. card stock. To fine tune depth, turn the dial clockwise for thinner materials and counter-clockwise for thicker.