

Fiskars® Teeny Tiny Punch

- Easy and fun punch with interchangeable patterns!
- For kids and adults alike
- Confetti storage compartment
- Maximum material thickness: **180g.**

1. Features

Ergonomic and easy-to-use handle

Confetti collector for use as decoration for your albums, cards and other decorative objects, etc...




2. Handling the Teeny Tiny punch

Very easy to use the Teeny Tiny punch is ideal for all your creative needs.

1/ Insert the die into the punch, then press firmly on the handle.



2/ To collect the perforated shapes, pull smoothly the blue tab on the base of the punch

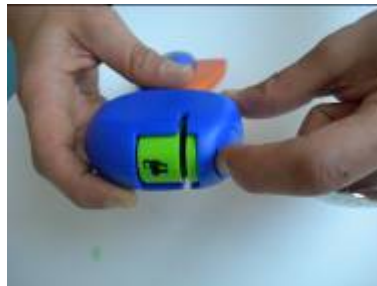

3/ To eject and change the die, pull firmly the blue tab until the die is released from the handle.

Warning: Turn your handle toward your working place to eject safely the die.





Tip:

Face the Teeny Tiny punch downwards to eject the shape safely.

Gluing techniques:

Place the applicator of the glue pen over what you have to glue. Put a drop of glue on the back of the shape to be glued (confetti from the Teeny Tiny punch). Be careful not to use too much glue.

Another way to decorate your creations is to use reversible adhesive squares (available in a variety of formats) when gluing your confetti. There is a very simple technique for doing this: stick adhesive paper to the back of your paper before punching out the shapes. Once you have punched out the shapes, simply remove the protective film then apply your shape onto your project.



Accessories:

Use Fiskars® Micro-Tip® clips to help when applying glue to your perforated shapes.

3. Tips

To align your shapes in a straight line, measure the space required between each shape. Using a pencil, lightly mark the reverse where you want the shapes to be created.



When you have aligned the markings with the centre of the Fiskars® Teeny Tiny punch, create your shapes.

If the paper gets caught up in the Teeny Tiny punch, tap it lightly on your work surface to free up the paper. Repeatedly punching vellum paper makes the punching much easier.

The quality and design of your Fiskars® tool lets you work with a wide range of materials: paper, photos, plastic, vinyl, adhesives, etc.... Try out different combinations by mixing various shapes and patterns for your projects.



After each use of the Teeny Tiny punch, give it a light tap on your work surface to release all the excess paper.

To sharpen your cutting tool, repeatedly punch through sand paper, choosing one with very fine grain, so as not to damage your Fiskars® tool.

Store your Teeny Tiny punch in a dry place, to prevent it from rusting.

FISKARS®